

CZH-10A 10w FM Transmitter User Manual

Date: 2010-11-4

Version : V1.0



Product Introduction:

CZH-10A is a stereo fm transmitter covering the entire FM band from 87~108mhz. The power output is 0~10w , power adjustable from 0~10w by 99 steps. It is widely used in campus, community, office and other public places, it is a perfect choice for the FM amateurs.

Outstanding Features:

- I Strong power output, maximum could reach over 10w .
- I Power adjustable, from 0~10w by 99steps.

- I PLL technology
- I pipit system for stereo coding
- I All touch mode buttons
- I Chinese/English, bilingual option
- I Aluminium casing
- I Excellent ventilating system

For operation instruction, please check more information below:

Accessories

Name	Quantity	Remark
CZH-10A fm transmitter	1	Regular accessory
Power adapter	1	Regular accessory
Audio cable	1	Regular accessory
FM antenna	1	Optional accessory
Antenna connector	1	Optional accessory
GP-1 antenna	1	Optional accessory
GP-2 antenna	1	Optional accessory
Vehicle mobile antenna	1	Optional accessory

CZH-10A



Introduction of ports:





- 1. Microphone Interface (3.5mm)** **2. R/L line input** **3."+" UP** **4."-" DOWN**
5. Menu(Also use as"POWER ON/OFF"and "YES" button) **6. Power Input interface**
7.Antenna Interface (N base)

Installation:

- I Antenna should be fixed in an open and high place ,make sure there is lightning protection.
- I Connect the antenna cable to port #7 of the transmitter (antenna interface N base).Make sure the interface is well connected to the transmitter.
- I Insert the plug (DC2.5mm) of power adapter to port #6 of the transmitter(power interface)
- I Plug the 3.5mm audio cable to port#2 of the transmitter, the other end connecting audio

source .

- I Microphone Interface) 。 If it's needed , you can choose MIC , the plug of which is 3.5mm the same as audio cable . Plug it to Por#1 . **Attention : MIC could only be Electret MIC , which is exactly the MIC used for online chatting , it doesn't support to the rm ic such as moving coil type .**
- I Installation DONE .

Switch ON/OFF the transmitter:

- I After installation of the ports , check it again , make sure everything is ok , then connect the power . **Attention : Before switching on the machine , make sure the antenna is connected to the transmitter . If it's possible , please test the antenna standing wave , choose a frequency point with the smallest VSWR , then don't adjust the frequency randomly , because the antenna could be seriously affected by the change of frequency , which will cause big standing waves . The power amplifier tube could be burned because of this .**
- I After switching on the transmitter , LCD shows "system s boosting" , wait for 2 seconds until you heard 'D i' sound , this means the self-check of the system is done . LCD then shows "system standby" . Now press power button **#5** , the system will go into working mode . See picture below :



- I Switching ON the transmitter-DONE .
- I Press button **#5** , system will go to the PowerOFF interface . LCD shows "system standby" .


Menu setting:

No	Name	Description
1	Frequency Setting	Frequency range 87~108MHz
2	Volume setting	Adjust the external audio volume, to ensure the transmitter in the best status of modulation frequency. 0~79 steps adjustable.
3	MC setting	Adjust the volume of external MC, to ensure the transmitter in the best status of modulation deviation. 0~79 steps adjustable.
4	Power setting	Set the output power, 0~10w adjustable by 99 steps.
5	Language setting	Optional: Chinese, English
6	Exit	Exit to home screen


Parameter setting:

I Frequency setting:

Press button #5 for 2 seconds, system goes into menu setting. Press #1 or #2 to enter the setting page:

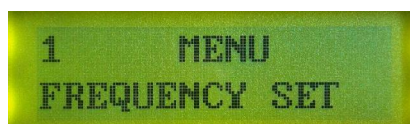

Press #5 to confirm, see picture below:

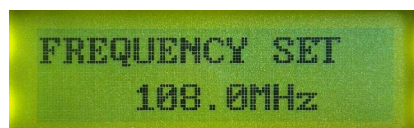

Press #1 or #2 to set the working frequency, then press #5 to confirm. Exit to the menu page,


frequency setting finished.

I Volume setting:

In the menu setting page, press #1 or #2 to the options:




Press #5 to confirm, see picture below:

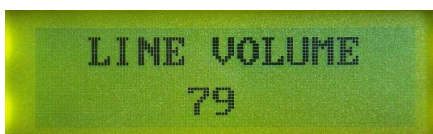


Press #1 or #2 to set the volume, then press #5 to confirm. Exit to menu page, volume setting finished.

I MC setting:

In Menu page, press #1 or #2 to Menu option 3:

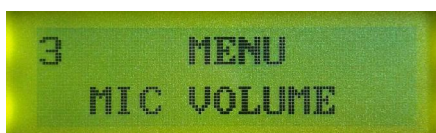

Press #5 to confirm, see picture below:

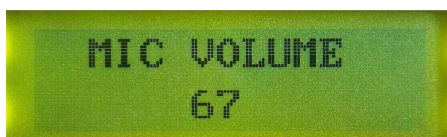

Press #1 or #2 to set the volume, then press #5 to confirm. Exit to menu page, MIC volume

setting finished.

I OutputRF power setting:

In the menu page, press #1 or #2 to Menu option 4:

